





Unit 10, 16 Loyalty Road | North Rocks | NSW 2151
 T 96309194 | www.spar-racking.com.au
 PALLET, LONGSPAN & CANTILEVER RACKING | MEZZANINE'S
 DESIGN | SUPPLY | VISUAL SAFETY AUDITS

Assembly instructions - Heavy Duty Cantilever

For this assembly you will need the following for a safe install.



Rubber or plastic headed mallet



Standard square head plier



Power screwdriver with M30 socket or fixed M30 spanner


OR




M20x40 Bolt & Nut set




M16 Dynabolt



Arm Lock pin




M10x130 Bolt & Nut set




Brace connector



M10x30 Bolt & Nut set

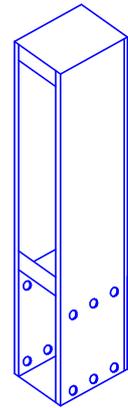


Slide column into base as shown and affix with 12 pcs M20x40 Bolt & Nut set.

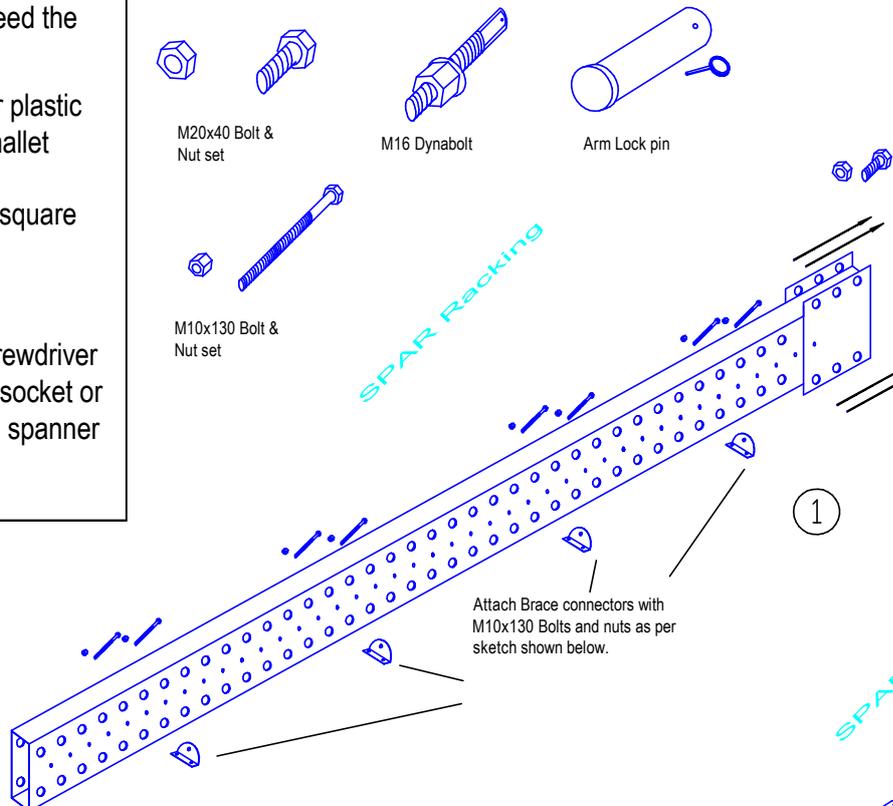

Attach Brace connectors with M10x130 Bolts and nuts as per sketch shown below.

Arm lock pin

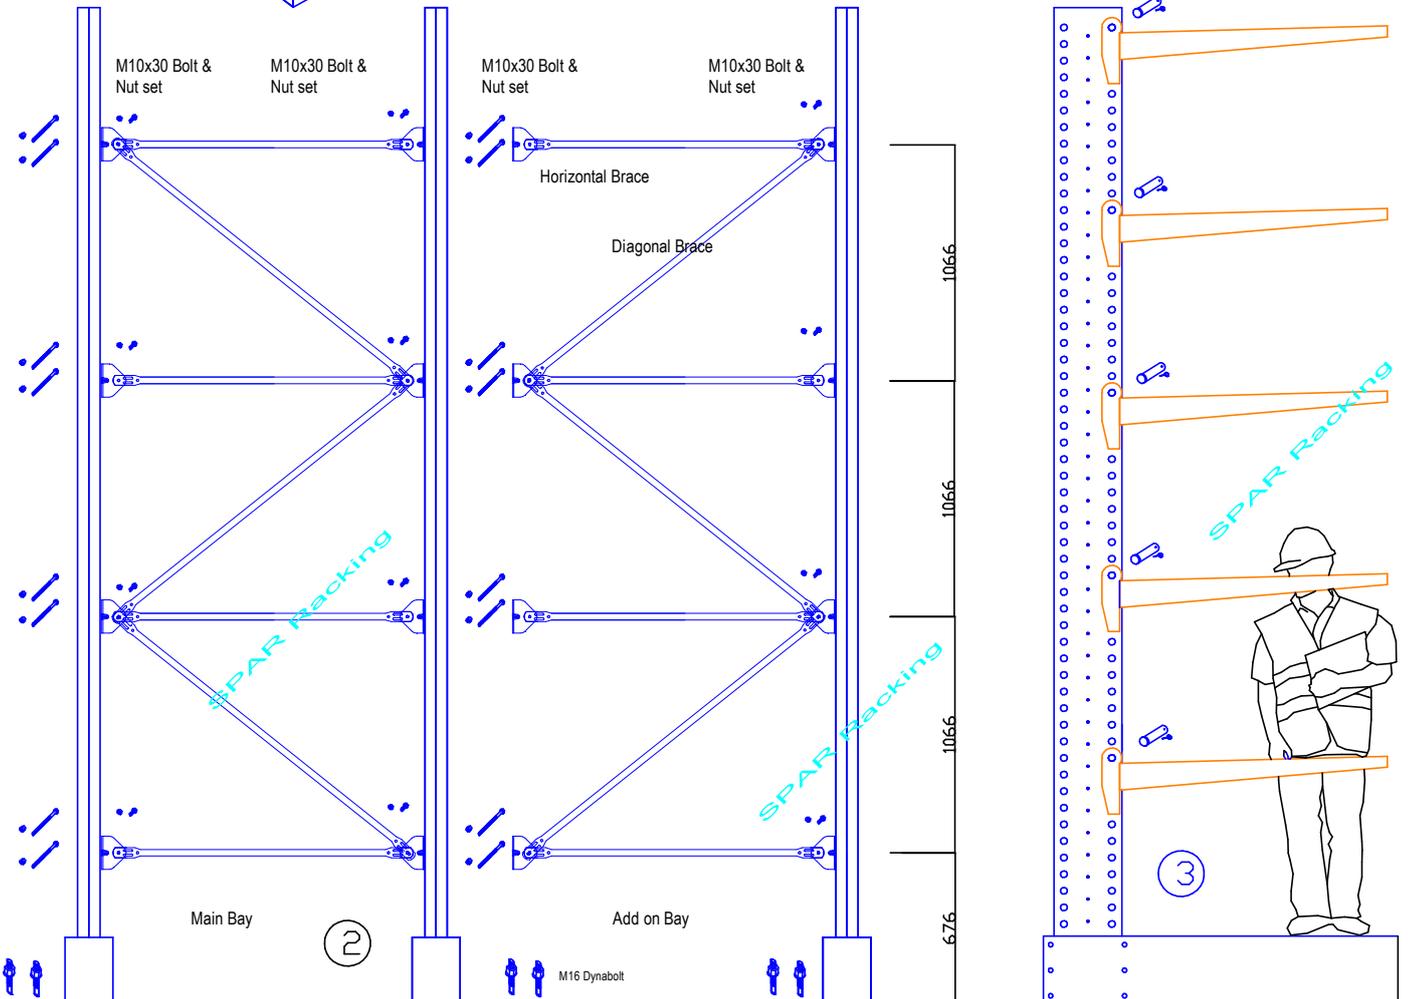

M10x30 Bolt & Nut set

Horizontal Brace

Diagonal Brace

1066

1066

1066

676

Main Bay

Add on Bay

2

M16 Dynabolt

3

FRONT ELEVATION VIEW