






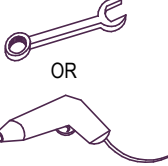
Unit 10, 16 Loyalty Road | North Rocks | NSW 2151  
 T 96309194 | [www.spar-racking.com.au](http://www.spar-racking.com.au)  
 PALLET, LONGSPAN & CANTILEVER RACKING | MEZZANINE'S  
 DESIGN | SUPPLY | VISUAL SAFETY AUDITS




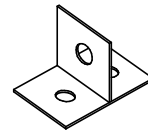


Brace connector


### Assembly instructions - Light Duty Cantilever

For this assembly you will need the following for a safe install.




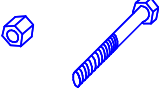
-  Rubber or plastic headed mallet
-  Standard square head plier
-  Power screwdriver with M30 socket or fixed M30 spanner

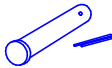-  M10x85 Bolt & Nut set
-  M10x20 Bolt & Nut set
-  M12 Dynabolt
-  Arm Lock pin

Slide column into base as shown and affix with 5 pcs M20x110 Bolt & Nut set.

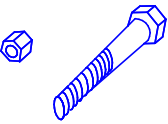-  M20x110 Bolt & Nut set

Attach Brace connectors with M10x85 Bolts and nuts as per sketch shown below.

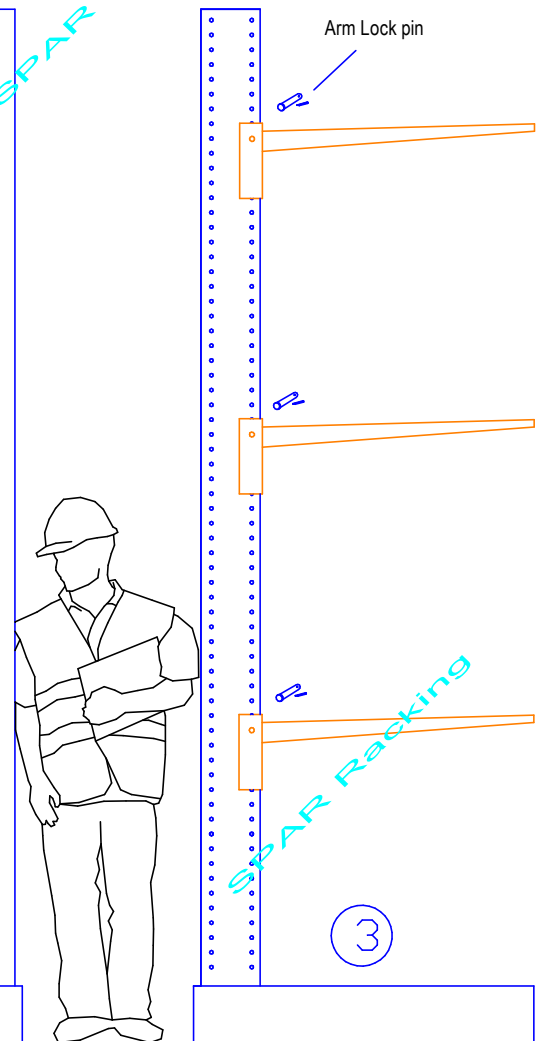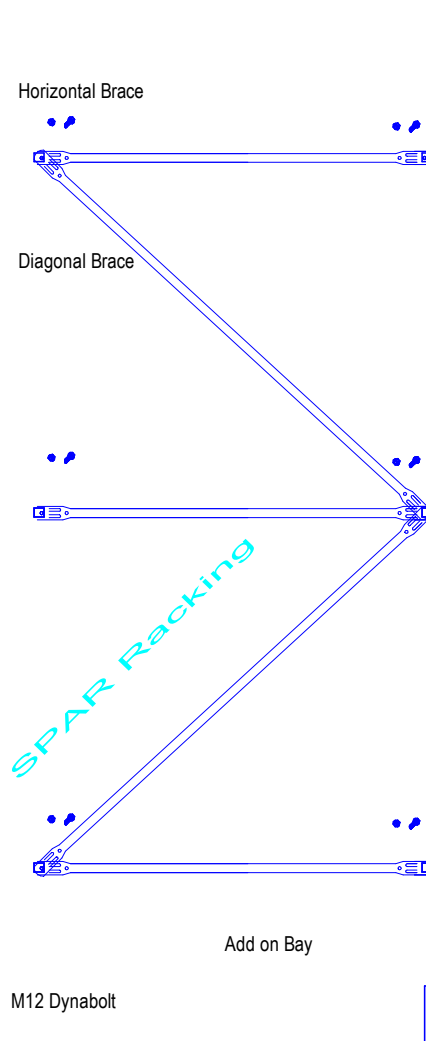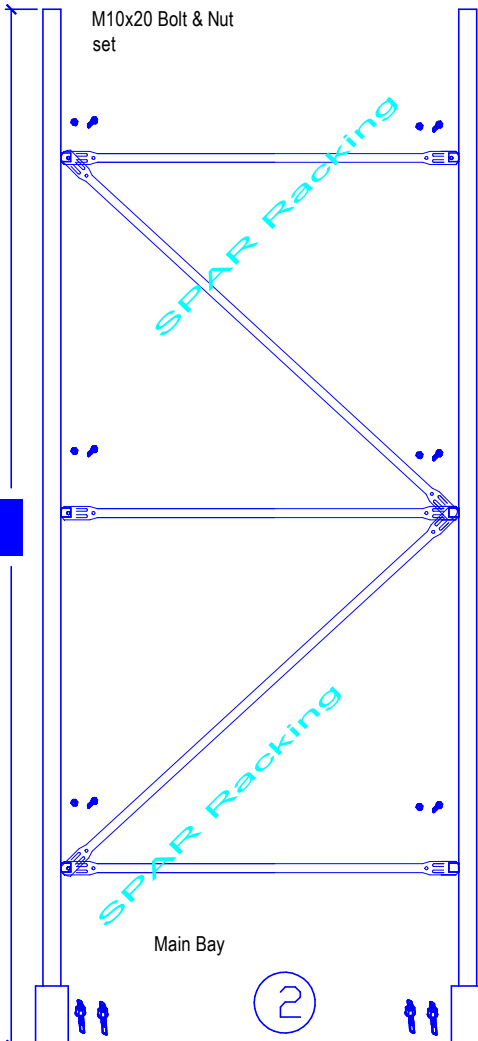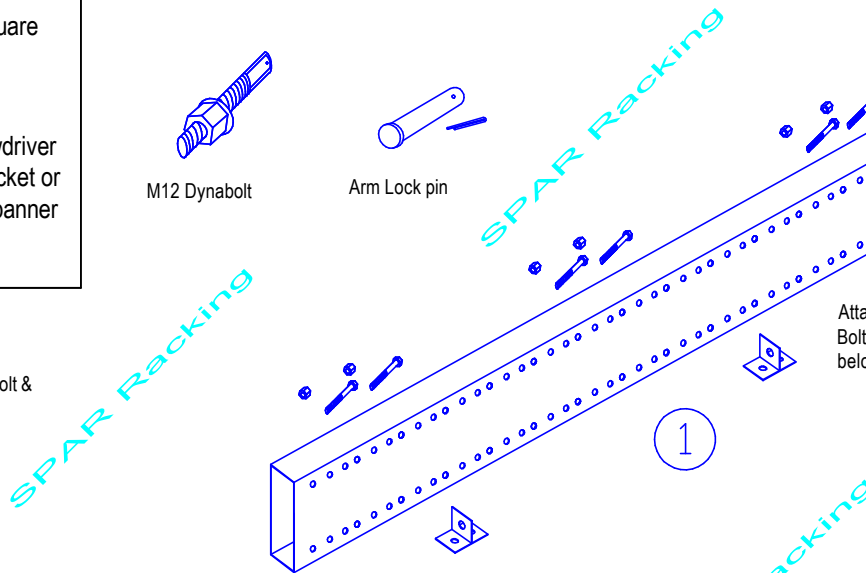

FRONT ELEVATION VIEW